

# Fitting Guide for Ford Fiesta MK7

## Performance Rear Lights

1. Before you start, you will need a Torx Tx30 screwdriver or large flathead screw driver and a phillips screwdriver:

2. Remove the parcel shelf.



3. Now, remove the two Torx screws with the Torx screwdriver / Flat head screw driver:

4. The light unit will feel loose. But there's still a wingnut to remove.

5. Undo the screw that holds on the boot trim.  
6. Lift the trim and fold the side carpet back.  
7. Now you can get your hand inside the bodywork.

Here you will find the wingnut.



8. Loosen the wingnut with your fingers, then pull the light unit away from the body.



9. To remove the electrical connector , squeeze the clips and pull it towards you.

10. Time to put the new light in.

11. First reattach the electrical connector:

12. Align the light unit with the body.

13. Gently push the whole unit in.

14. Reach inside the bodywork and attach the wingnut to its original position.



15. Put the two torx screws back in.

16. Gently push the side carpet back into place and screw the plastic trim back into place.

17. Make sure all the seals around the boot are put back in place.

18. And put the parcel shelf back on.



Next Day  
Delivery



Vehicle Registration  
Look Up

GB **ENTER YOUR REG**

30,000+  
Parts in Stock

