


# Ford Transit MK6/MK7 Wing Door Mirror Fitting Guide



Don't forget  
to wear PPE

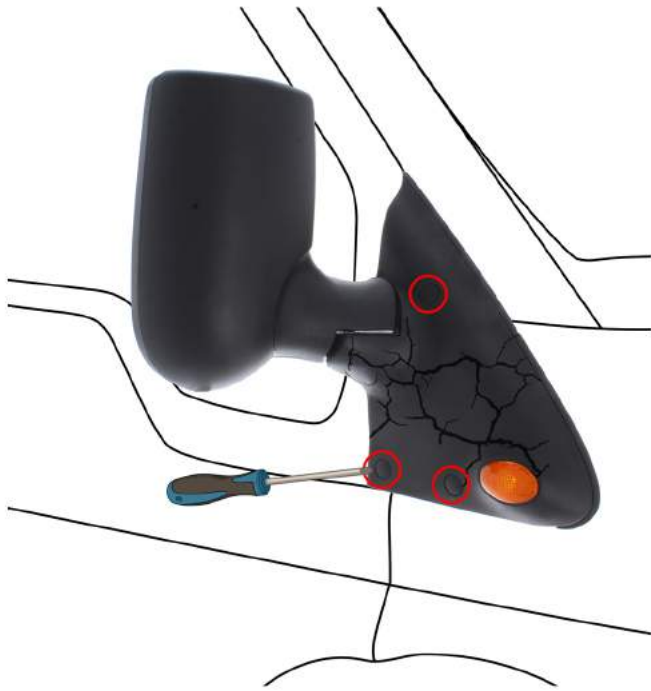

1. Using a flathead screwdriver, pry the 3 small covers to expose the bolt locations.

2. You will need an 8mm extension for your ratchet to remove the bolts holding the mirror in place. Take care to maneuver the bolt through the hole.



3. Gently pry the side repeater on each side to remove and disconnect so it can be fitted to the replacement unit.



(MK7 may feature shear bolts)



4. Once the old mirror has been removed, reconnect the side repeater and align the replacement unit onto the body.

5. Insert the bolts back into the fittings and ensure they are tightened.



6. Reattach the small circular bolt location covers.



Next Day  
Delivery



Vehicle Registration  
Look Up



30,000+  
Parts in Stock

